 


MINI AIR COMPRESSOR DC-25X(i)


Installation Guide

● Operating with I.T.E. Power Supply

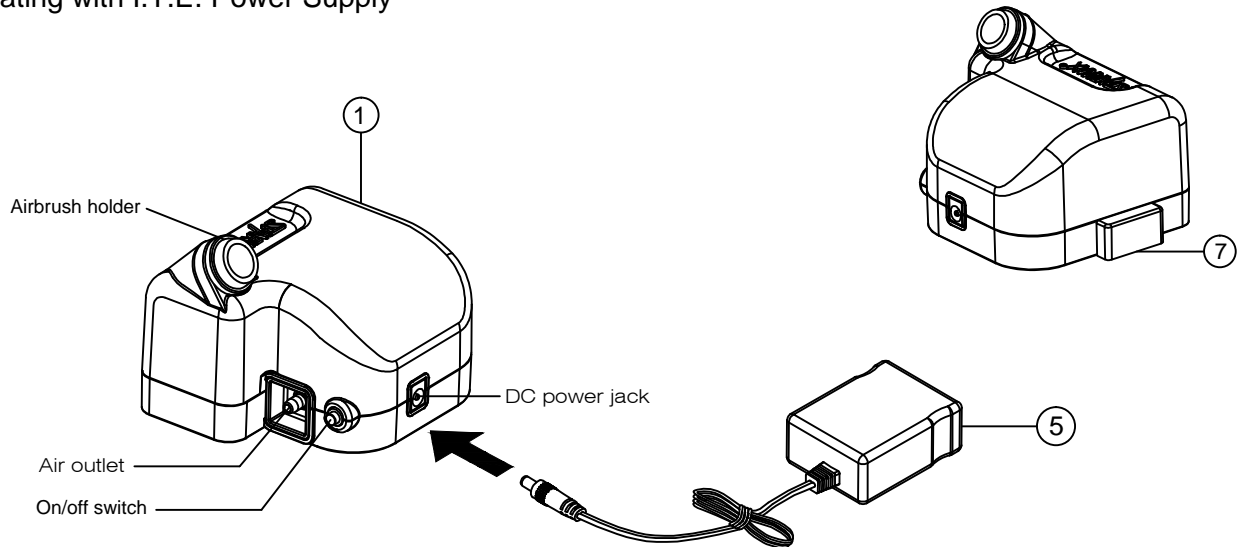


Part list


① Compressor

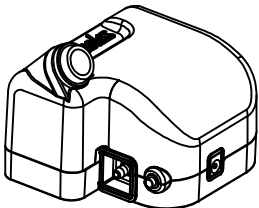


④ Straight air hose

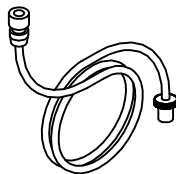

⑤ I.T.E. power supply

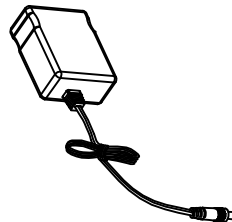

⑦ Battery hook lid

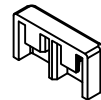

※Please check the Voltage/Spec. label on the machine

APPLICATION PRECAUTION

1. Insert the small end of the I.T.E. power supply to the DC power jack, and insert the other end to an AC receptacle.
2. All parts of the compressor and power supply should be kept clean and dry.
3. When restarting the compressor during operation, always release air pressure from the airbrush first before turning on again.
4. To maintain the best performance, after 30 minutes of continuous running, the machine should be allowed to cool down for a minimum period of 10~15 minutes.
5. Do not touch the compressor and power supply during and after use as they will heat up.
6. Do not use any lubricants, which may damage the compressor.
7. Operate the compressor in a dry, clean, well-ventilated area.
8. Never spray flammable or toxic materials.
9. For safety purpose, use under 30 psi, do not exceed.
10. If any abnormal conditions occur, please stop the compressor immediately and unplug the power supply.
11. Inappropriate usage and dismantling of the parts by the user might damage the compressor and power supply, and injure the user.
12. If any parts of the machine are damaged, it must be sent to the distributing agent or manufacturer for replacement to avoid hazard.
13. The machine has a thermal switch that automatically shuts-off the compressor if it becomes overheated or lacks voltage.
Disconnect the I.T.E. power supply from the compressor and allow the machine to cool down for approximately 15 ~ 30 minutes and turn on again.